

FRONT OF TRACTOR

□ LIGHTS & REFLECTORS

- o Proper Color
- o Working
- o Not Broken
- o Not cracked

□ LEAKS

- o Check for puddles
- o Check for drips under engine



■ Pre-Trip Inspection Test Items

■ Reference Items

ENGINE COMPARTMENT - PASSENGER SIDE

□ WATER PUMP

- o Mounted Securely
- o No missing bolts or parts
- o Hoses attached securely
- o No leaking hoses or water pump
- o Belts no more than 3/4 inch of play
- o Belts not cracked, frayed, or damaged

□ ALTERNATOR

- o Mounted Securely
- o No missing bolts or parts
- o Wires good connections, not frayed
- o Belt no more than 3/4 inch of play
- o Belts not frayed or cracked

□ OIL LEVEL

o Check for level and condition

☐ PLUS ALL OTHER HOSES & WIRING

- o Not cracked, frayed, or broken
- o Belts no more than ¾ inch of play
- o Hoses not leaking



■ Pre-Trip Inspection Test Items



ENGINE COMPARTMENT - DRIVER SIDE

□ COOLANT

- o Check for level and condition
- o Hoses attached and not leaking

□ POWER STEERING RESERVOIR


- o Mounted properly
- o Hoses attached and not leaking
- o Check for level and condition

\square AIR COMPRESSOR

- o Mounted Securely
- o No missing bolts or parts
- o No air leaks at lines
- o Check if gear or belt driven
- o Belt no more than 3/4 inch of play
- o Belts not cracked or frayed

☐ STEERING GEAR BOX

- o Mounted properly
- o No missing parts, nuts or bolts
- o Lines and hoses not leaking or broken

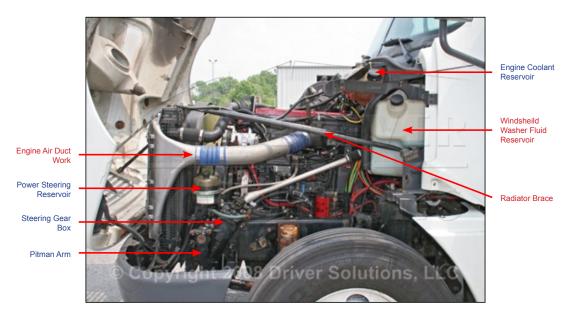

■ Pre-Trip Inspection Test Items

■ Reference Items

□ POWER STEERING RESERVOIR

- o Mounted properly
- o Hoses attached and not leaking
- o Check for level and condition

\square AIR COMPRESSOR

- o Mounted Securely
- o No missing bolts or parts
- o No air leaks at lines
- o Check if gear or belt driven
- o Belt no more than ¾ inch of play
- o Belts not cracked or frayed

☐ STEERING GEAR BOX

- o Mounted properly
- o No missing parts, nuts or bolts
- o Lines and hoses not leaking or broken

☐ STEERING LINKAGE

- o Pitman arm, Drag link, Steering knuckle, Tie rods and tie rod ends
 - o Not cracked, bent or broken
- o Castle nuts and cotter pins
 - o Not missing and in place

ENGINE COMPARTMENT - DRIVER SIDE CON'T



■ Pre-Trip Inspection Test Items




ENGINE COMPARTMENT - DRIVER SIDE CON'T

\square AIR COMPRESSOR

- o Mounted Securely
- o No missing bolts or parts
- o No air leaks at lines
- o Check if gear or belt driven
- o Belt no more than 3/4 inch of play
- o Belts not cracked or frayed

□ STEERING GEAR BOX

- o Mounted properly
- o No missing parts, nuts or bolts
- o Lines and hoses not leaking or broken

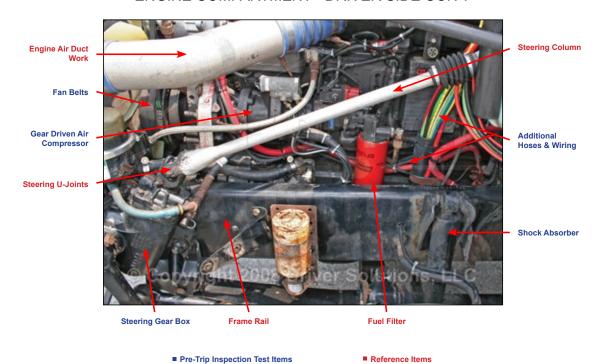

ENGINE COMPARTMENT - AIR COMPRESSOR



☐ AIR COMPRESSOR

- o Mounted Securely
- o No missing bolts or parts
- o No air leaks at lines
- o Check if gear or belt driven
- o Belt no more than ¾ inch of play
- o Belts not cracked or frayed



FRONT SUSPENSION

☐ LEAF SPRINGS


- o Not shifted or out of place
- o Not cracked, broken or missing

□ SPRING MOUNTS

- o Mounted securely- front, back, and U-blots
- o Not cracked or broken

☐ SHOCK ABSORBER

- o Mounted Securely
- o Not bent or dented
- o Not leaking

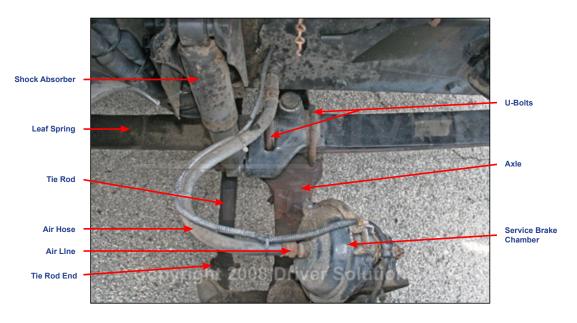

■ Pre-Trip Inspection Test Items

■ Reference Items

☐ LEAF SPRINGS

- o Not shifted or out of place
- o Not cracked, broken or missing

□ SPRING MOUNTS

- o Mounted securely- front, back, and U-blots
- o Not cracked or broken

\square SHOCK ABSORBER

- o Mounted Securely
- o Not bent or dented
- o Not leaking

FRONT SUSPENSION CON'T



Located either behind the front bumper or behind the fuel tank.

■ Pre-Trip Inspection Test Items



□ HOSES AND LINES

- o Mounted securely
- o Not leaking
- o Not cracked or frayed

□ CHAMBER

- o Mounted securely
- o Not dented or damaged
- o Not leaking

☐ SLACK ADJUSTER

o No more than 1 inch of free play at the push rod with the brakes released. o Not bent, broken, loose, or missing parts


□ DRUMS

- o Not cracked, broken or dented
- o No oil leaking from inner oil seal, free of debris

□ LININGS

- o No cracked, broken or missing parts
- o Not less than 1/4 inch in thickness

FRONT BRAKES

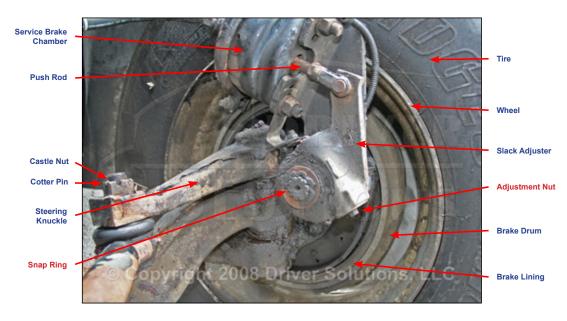

■ Pre-Trip Inspection Test Items

■ Reference Items

\square HOSES AND LINES

- o Mounted securely
- o Not leaking
- o Not cracked or frayed

□ CHAMBER

- o Mounted securely
- o Not dented or damaged
- o Not leaking

☐ SLACK ADJUSTER

o No more than 1 inch of free play at the push rod with the brakes released. o Not bent, broken, loose, or missing parts

□ DRUMS

- o Not cracked, broken or dented
- o No oil leaking from inner oil seal, free of debris

□ LININGS

- o No cracked, broken or missing parts
- o Not less than 1/4 inch in thickness

FRONT BRAKES CON'T



■ Pre-Trip Inspection Test Items



□ TIRES

- o Proper inflation company or manufacturer specification
- o No bulges, cuts, or retreads
- o Minimum tread depth of 4/32"

□ RIMS

o Not bent, cracked, No welding repairs.

□ LUG NUTS

- o None are missing
- o Tight no shinny threads, or rust trails

☐ OUTER HUB OIL SEALS

- o Not leaking, no missing bolts
- o Proper oil level



FRONT WHEEL

■ Pre-Trip Inspection Test Items

■ Reference Items

□ DRIVER'S DOOR

- o Door opens and closes properly
- o Seal is in good condition

□ DRIVER'S MIRRORS

- o Clean and free of obstruction
- o Not cracked, broken, or damaged
- o Mounted securely

☐ FUEL TANK

- o Mounted securely
- o Not leaking
- o Seal in cap OK

DRIVER FUEL AREA



■ Pre-Trip Inspection Test Items



☐ AIR LINES & ELECTRIC LINE

- o Not cracked, frayed, cut, or kinked
- o Mounted securely at the glad hands
- o Not leaking

□ BATTERY BOX & BATTERIES

- o Box is mounted properly
- o Batteries are secure in the box
- o Lid secure
- o Connections not corroded

□ CATWALK

- o Mounted properly
- o Not, missing, or damaged
- o Free of obstructions

☐ DRIVE SHAFT

- o Not bent, or damaged
- o Coupling, U-joints appear secure

□ EXHAUST SYSTEM

- o Securely mounted
- o Not dented or damaged
- o Not leaking


\Box FRAME

- o Not cracked, or damaged
- o No missing bolts
- o No illegal welds

□ LIGHTS & REFLECTORS

o Clean and working

BEHIND THE CAB

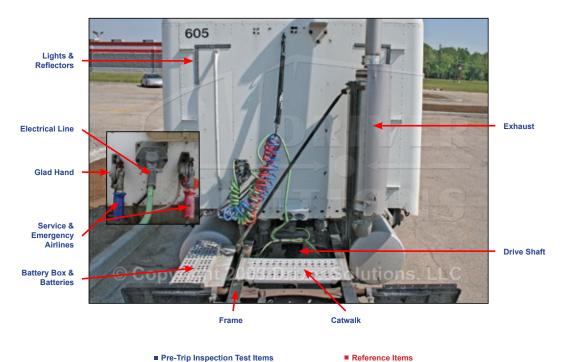

FRONT OF TRAILER



■ Pre-Trip Inspection Test Items

■ Reference Items

☐ HEADER BOARD

o No holes or missing rivets

□ LIGHTS & REFLECTORS

- o None broken, cracked, or missing
- o Working and proper color of amber



DRIVE AXLE SUSPENSION

☐ CONTROL ARM MOUNT

- o Mounted securely
- o Not bent, broken or damaged

\square CONTROLARM

- o Mounted securely front, back, and U-bolts
- o Not cracked, or broken

☐ SHOCK ABSORBER

- o Mounted Securely
- o Not bent, dented or leaking

☐ TORSION BAR

- o Mounted Securely
- o Not bent, broken or damaged

☐ AIR BAGS

- o Mounted Securely
- o Not leaking



■ Pre-Trip Inspection Test Items

■ Reference Items

☐ CONTROL ARM MOUNT

- o Mounted securely
- o Not bent, broken or damaged

□ CONTROL ARM

- o Mounted securely front, back, and U-bolts
- o Not cracked, or broken

☐ SHOCK ABSORBER

- o Mounted Securely
- o Not bent, dented or leaking


☐ TORSION BAR

- o Mounted Securely
- o Not bent, broken or damaged

☐ AIR BAGS

- o Mounted Securely
- o Not leaking

DRIVE AXLE SUSPENSION CON'T & FIFTH WHEEL

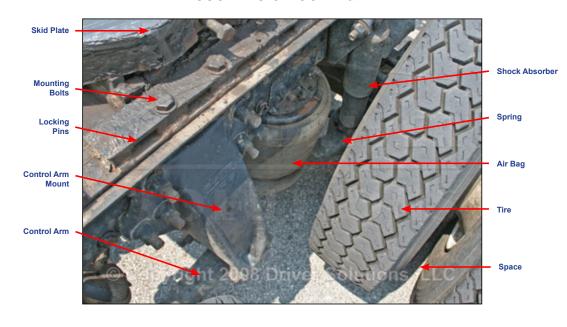

■ Pre-Trip Inspection Test Items



\square HOSES AND LINES

- o Mounted securely
- o Not leaking
- o Not cracked or frayed

□ CHAMBER

- o Mounted securely
- o Not dented or damaged
- o Not leaking

☐ SLACK ADJUSTER

o No more than 1 inch of free play at the push rod with the brakes released. o No bent, broken, loose, or missing parts

□ DRUMS

- o Not cracked, broken or dented
- o No oil leaking from inner oil seal, free of debris

□ LININGS

- o No cracked, broken or missing parts
- o Not less than 1/4 inch in thickness

DRIVE BRAKES & DRIVE SHAFT



■ Pre-Trip Inspection Test Items

■ Reference Items

\Box TIRES

- o Proper inflation company or manufacturer specification.
- o No bulges or cuts, can have retreads
- o Minimum tread depth of 2/32"

□ RIMS

- o Not bent or cracked
- o No welding repairs

\square LUG NUTS

- o None missing
- o Tight no shinny threads, or rust trails


\square OUTER AXLE SEAL

o Not leaking, no missing bolts

\square SPACE OR SPACER

- o Check for objects between wheels
- o Check for proper spacing


DRIVE WHEELS

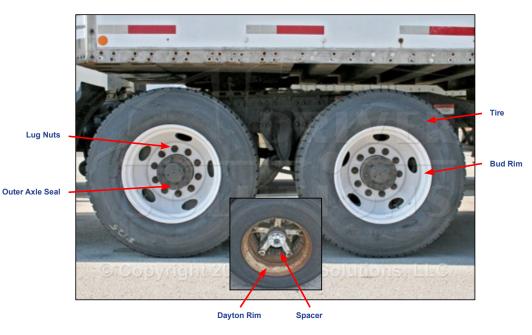

■ Pre-Trip Inspection Test Items



REAR OF TRACTOR

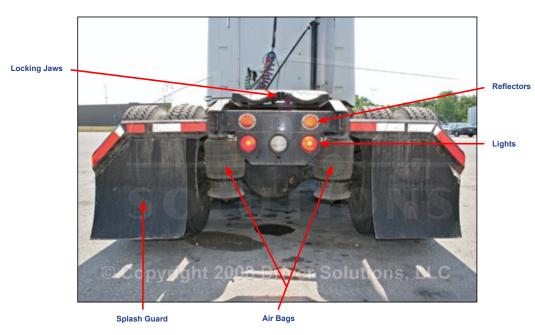

□ LIGHTS & REFLECTORS

- o Not cracked, or broken
- o Working and proper color

□ SPLASH GUARDS

o Not missing or torn and properly mounted

□ MOUNTING BOLTS

o None missing or broken

\square RELEASE ARM

- o Not bent, broken, or damaged
- o Engaged in the lock position

☐ LOCKING PINS

- o No missing or broken parts
- o Engaged and locked

□ PLATFORM

- o Securely holds skid plate
- o Not cracked, or broken

\square SKID PLATE

o Mounted properly on the platform

Mounting Bolts

Slide Stops

(all 4 corners)

- o Properly greased
- o Tilting freely

□ KING PIN

o Not broken, bent, or damaged

\square APRON

o No bends or damage to visible portions

\Box GAP


o Check that the trailer apron is lying flat on the fifth wheel skid plate

☐ JAWS

o Check that the locking jaws are fully closed around the shank of the king pin

COUPLING SYSTEM

■ Pre-Trip Inspection Test Items

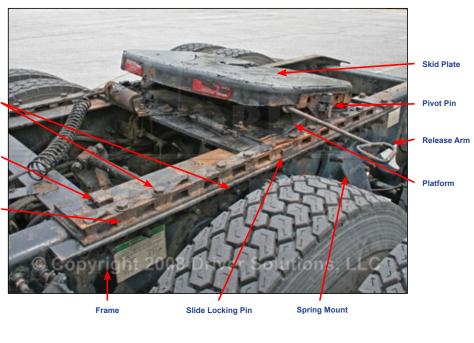

■ Pre-Trip Inspection Test Items

Reference Items



□ LANDING GEAR

- o Fully raised and handle secure
- o No missing parts
- o Support frame not cracked, broken, or damaged

□ FRAME

- o Not cracks, bends, or damaged
- o No missing or damaged cross members
- o No signs of holes or damage to trailer floo

□ TANDEM RELEASE

- o Locking pins secure and locked in place
- o Release handle is secure

□ LIGHTS & REFLECTORS

- o Working and proper color
 - o Front and side are amber
- o Rear edge is red
- o Not broken, cracked, or missing

SIDE OF TRAILER



■ Pre-Trip Inspection Test Items

■ Reference Items

TRAILER SUSPENSION

\Box LEAF SPRINGS

- o Not shifted or out of place
- o Not cracked, broken or missing

\square SPRING MOUNTS

- o Mounted securely front, back, and U-bolts
- o Not cracked, or broken

□ TORQUE ROD

- o Mounted Securely
- o Not bent, broken or damaged

☐ SHOCK ABSORBER (If Equipped)

- o Mounted Securely
- o Not bent, dented or leaking

☐ AIR BAGS (If Equipped)

- o Mounted Securely
- o Not leaking



■ Pre-Trip Inspection Test Items



\square HOSES AND LINES

- o Mounted securely
- o Not leaking
- o Not cracked or frayed

□ CHAMBER

- o Mounted securely
- o Not dented or damaged
- o Not leaking

☐ SLACK ADJUSTER

- o 90 degrees with brakes applied.
- o No more than 1 inch of free play at the push rod with the brakes released.
- o No bent, broken, loose, or missing parts

□ DRUMS

- o Not cracked, broken or dented
- o No oil leaking from inner oil seal, free of debris

□ LININGS

- o No cracked, broken or missing parts
- o Not less than 1/4 inch in thickness

TRAILER BRAKES



■ Pre-Trip Inspection Test Items

■ Reference Items

\Box TIRES

- o Proper inflation-company or manufacturer specification.
- o No bulges or cuts, can have retreads
- o Minimum tread depth of 2/32"

\square RIMS

- o Not bent or cracked
- o No welding repairs

\square LUG NUTS

- o None missing
- o Tight no shinny threads, or rust trails

☐ OUTER HUB OIL SEAL

- o Not leaking, no missing bolts
- o Fluid level OK

□ SPACE OR SPACER

- o Check for objects between wheels
- o Check for proper spacing

TRAILER WHEELS



■ Pre-Trip Inspection Test Items



REAR OF TRAILER

□ DOORS

- o Not bent, broken, or damaged
- o Close and latch securely
- o Hinges secure, no damage

□ DOOR TIES

o Not missing, broken, and securely mounted

☐ SPLASH GUARDS

- o Mounted properly
- o Not missing, ripped or torn

□ DOT BUMPER

o Not bent or damaged

□ LIGHTS & REFLECTORS

- o Working and proper color
- o Not broken, cracked, or missing



■ Pre-Trip Inspection Test Items

■ Reference Items

□ EMERGENCY EQUIPMENT

- o Spare electrical fuses
- o 3 reflective triangles
 - o Red ands mounted securely
- o Fire extinguisher
 - o Minimum of 10 BC
 - o Fully charged
 - o Securely mounted

☐ SAFETY BELT

- o Latches securely
- o Mounted securely

\square STEERING WHEEL

o No more than 10 degrees of free play

□ CLUTCH

o Engages and disengages smoothly

SHIFTER

- o Moves in and out of gear properly
- o Range selector works

□ WATER TEMP GAUGE

o Gauge is working (170 – 210 degrees)

□ OIL PRESSURE GAUGE

- o Gauge is working properly
- o Normal oil pressure (20 45 PSI)
- o Check that the warning light goes out

\square AMMETER/VOLTMETER

o Gauge shows (12-14) volts to show battery is charging and that the generator or alternator is working properly

☐ LIGHTING INDICATORS

- o Left and right turn signal
- o 4-Way Flashers
- o High beam indicator

□ HORNS

- o Electric (Street) horn works properly
- o Air horn works properly

☐ HEATER & DEFROSTER

- o Move switch from heat to defrost
- o Check for air flow

\square WINDSHIELD

- o Clean and free of obstruction
- o Not cracked or broken

☐ WIPERS & WASHER

- o Working
- o Mounted securely to wiper arm
- o Rubber not torn
- o Washer sprays properly

☐ MIRRORS

o Clean and adjusted

□ PARKING BRAKE VALVES

- o Both are present and not leaking
- o Place vehicle in 1st gear
- o Release the tractor (yellow valve)
- o And slowly pull against the trailer to ensure the coupling is secure, tug again to ensure that the brakes will work. Pull the tractor Valve out.
- o Release trailer (Red valve)
- o And slowly tug against the tractor brakes to ensure they work.

IN CAB INSPECTION

